

データ項目名	説明	一般向けDR Residential	大口向けDR Wholesale	OpenADR1.0通信 仕様との対応	SEP2.0との対応
	Notify DR Event includes all of the elements	of Event with the follow	ing additional elemen		
Event Status	Gives the current status of an upcoming or active event.		n/a	EventState. simpleDRMode Data.Event Status FAR, NEAR, ACTIVE	
Event Modification Number	This is Modification number of the DR event. It is used to indicate that the DR Event has been modified by the Utility. Each time a DR Event is modified, this number is incremented.	Event Modification Number	Event Status	EventStatevent ModNumber	
Modification reason code	The reason the event was modified.	Modification reason code			
Cancellation reason code	The reason the event is being cancelled.	Cancellation reason code	n/a		DR event cancel control
(Cancel) Effective date/time	The date and time a cancellation takes effect.	(Cancel) Effective date/time	n/a		Cancel effective date/time
Baseline Dates Baseline Exclusion Dates	Dates of days used to calculate the Energy Baseline Dates of days Excluded from the calculation of the Energy Baseline		Baseline Dates Baseline Exclusion Dates		
Energy Baseline Value	Calculated Energy Baseline		Energy Baseline Value		
Energy Baseline Timestamp	Timestamp of Energy Baseline			Energy Baseline Timestamp	